AirLive GPON ONU-CATV Quick Installation Guide V1.0



1. Indicator and Interface Description



Figure 1 GPON ONU-CATV

1.2 Application Chart

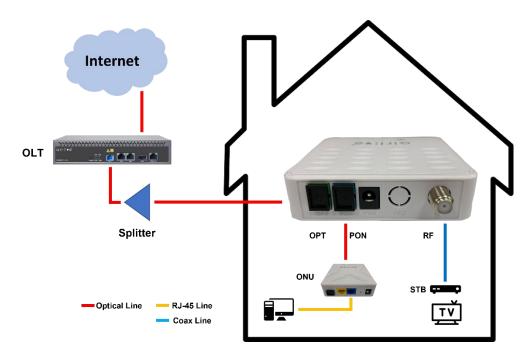


Figure 2 Application Chart

1.3 Panel Lights



Figure 3 Panel Lights

LED	Mark	Status	Description	
ОРТ	OPT	Red	Optical power <16dBm	
		Green	Optical power >16dBm	

Table 1 Panel Lights

1.4 Interface/button Panel



Figure 4 Interface Panel

Name	Function		
1: PON	Optical Input 1550/1490/1310mn SC/APC		
2 : LAN	Connect to ONU by SC type fiber connector, single mode optical fiber cable 1490/1310mn data interface SC/UPC		
3 : DC 12V	Connect with power adapter. DC 12V, 0.5A.		
4 : RF	RF OUT1 F connector		

Table 2 Interface/button Panel

2. Packing List

Contents	Quantity	Contents	Quantity
GPON ONU-CATV	1 pcs	Power adapter	1 pcs
Installation Guide	1 pcs		

3. Hardware Installation

Installation Environment Requirements

ONU equipment must be installed in the interior, and to ensure the following conditions:

- Confirmation at the ONU installation at sufficient space to facilitate cooling machine.
- ONU suitable operating temperature of -5 $^{\circ}$ C ~ 55 $^{\circ}$ C, humidity 10% to 90%.
- Device workplace should avoid radio transmitters, radar stations, and high-frequency interference from power equipment.

Equipment Installation

1. Installed on the desktop

Place the ONU on a clean bench, this installation is relatively simple, you can observe the following operation:

- Ensure the smooth workbench.
- Around the device there is enough space for heat dissipation.
- Do not place objects on the device.
- 2. Mounted on the wall
- Observation ONU equipment chassis two cruciform recess, in accordance with the position of the groove, installed two screws in the wall.
- The original selected two mounting screws gently snap into recesses aligned.
- Slowly let go, so that the device under the support of the screw hanging on the wall.
- Connect fiber and power adapter to the corresponding interfaces, and turn on the power of product.