

www.airlive.com

Declaration of Conformity

We, Manufacturer/Importer

AirLive Technology Corporation 4F, No.132, Lane 235, Baoqian Rd., Xindian Dist., New Taipei City 23145, Taiwan

Declare that the product

8-Port SOHO Gigabit Switch Live-8GT

is in conformity with

In accordance with 2014/30/EU and 2014/35/EU Directive

Clause

Description

■ EN 55032:2015+A11:2020

Electromagnetic compatibility (EMC)

■ EN 62368-1:2014+A11:2017

Electromagnetic compatibility (LVD)

■ CE marking



Manufacturer/Importer

Name: A van Rossem Position/ Title: Product Manager Place: Republic of China (Taiwan) Date: June 2022

-ron sono Gigabii swiich

Quick Setup Guide



Live-8GT

Regulatory Approvals

CE Statement

This product complies with the 2014/30/EU and 2014/35/EU directives, including the following safety and EMC standards:

- EN 55032:2015+A11:2020 Electromagnetic compatibility (EMC)
- EN IEC 61000-3-2:2019
- Electromagnetic compatibility (EMC)
- EN 61000-3-3:2013+A1:2019 Electromagnetic compatibility (EMC)
- EN 55035:2017+A11:2020 Electromagnetic compatibility (EMC)
- EN 62368-1:2014+A11:2017 Electromagnetic compatibility (LVD) - Safety

RoHS Statement

This product complies with RoHS directive 2011/65/EU and amendment Commission Delegated Directive (EU)2015/863.

- IEC 62321-3-1:2013
- IEC 62321-5:2013
- IEC 62321-4:2013+AMD1:2017
- IEC 62321-7-1:2015
- IEC 62321-7-2:2017
- IEC 62321-6:2015
- IEC 62321-8:2017

CE Marking Warning

This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

• FCC 47 CFR Part 15 Subpart B (Class A), ANSI C63.4:2014

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.
















www.airlive.com

Quick Setup Guide ▶

▼ Installation Steps

Figure A

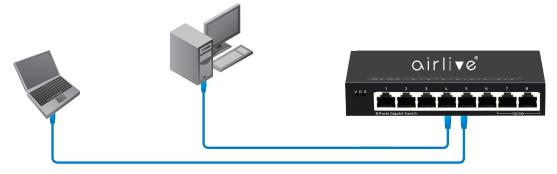

LED DEFINITIONS

Power	Red ON	Power is on and normal.
	Red Off	The switch is not receiving power.
Loop	Green ON	Port loop.
	Green Blinking	Port normal.
Port	Green ON	Link connected.
	Green OFF	Link disconnect.
	Green Blinking	Data transmisson.

Mode Switch Control

VLAN	Port isolation mode. In this mode ports 1~6 cannot communicate with each other and can only communicate with the Up-Link port 7/8.	
Default	Normal mode. All ports can communicate with each other. Loop Support.	
Extend	Extension mode. Data transmission distance can be extended to 250 meter at a transmission rate of 10Mb Port 1~6 only. 1~6 Ports support 100M Speed reducation negotiation, 250 meters in 10Mbps mode, Port 7 and Port 8 as Uplink Port at 1000Mbps.	

English

Installation Step:

- 1. Remove the switch and accessories from the package.
- 2. Connect power to the switch. Make sure that "Power" LED is on.
- 3. Check the Port LED indicator status. When a device is connected the port light up.
- 4. For more product information visit www.airlive.com.