


You can access the OLT by CLI (Command Line Interface) via console cable or telnet. Please see the below connection detail on how to how to access the OLT CLI via console cable.

1. Connect PC serial port or USB-to-Serial port to OLT console port by console cable.
2. Run secureCRT or other simulation tools such as Putty in the PC, and set parameters as follows.
  - Baudrate: 115200
  - Data bits: 8
  - Parity: none
  - Stop bits: 1
  - Follow control: none

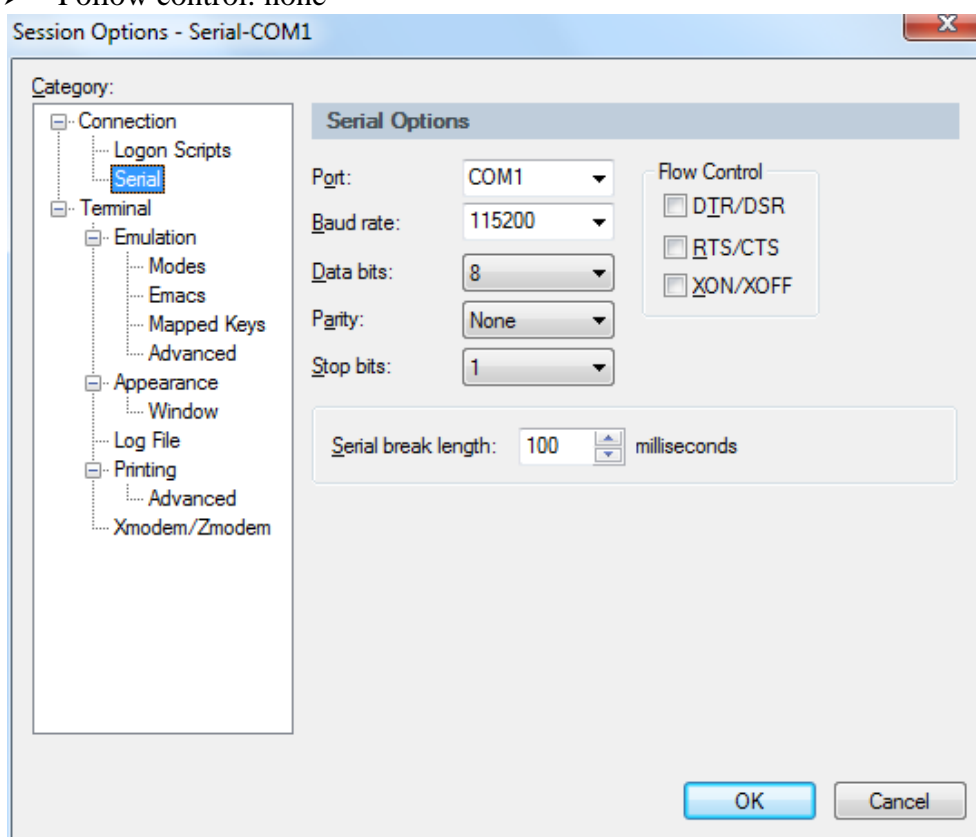

COM port properties

After turned on the power, there is boot information printing. After startup, press enter and input username and password to login.

Notice: *The default account is admin/Xpon@Olt9417#. For example,*

```

Login: admin
Password: Xpon@Olt9417#
gpon-olt> enable
Password: Xpon@Olt9417#
gpon-olt#
  
```