

OLT Fails to Start Successfully

1. Inspect or replace the power source.

1) Ensure that the output voltage of the power adapter/plug is within the rated range for normal operation of the device.

AirLive OLT power supply requirement

AC: 100~240V, 47/63Hz or/and DC: -48V

2) Try using a different power source, check if the OLT can start successfully.

3) If there are dual power supplies for the OLT, try connecting to another power supply and attempt to start the OLT again.



2. Check OLT system LED status:

1) Blinking: OLT had boot up.

Connect to aux port and uplink port, check if ports can be Link up.